

## Inner Valve Reconditioning Kits: 3/4 to 2 in.

### Description

The available parts listed in the selection chart can extend the service life of the valve series listed and return the valves to near original operating performance.

Note: For VG7000 Reconditioning Kits, refer to *VG7000 Series Bronze Globe Valves, Maintenance and Repair Catalog Page (LIT-1924275)* on Page 269.

### Selection Chart

**Inner Valve Reconditioning Kits, 3/4 to 2 in. (Part 1 of 2)**

Valve Body	Valve Size (in.)	Spring Range	Inner Valve Kit
V-3752	3/4 UA	3 - 6 or 9-13	<b>V-3752-6016 or V-3752-6027</b>
V-3752	1 UA	3 - 6 or 9-13	<b>V-3752-6017 or V-3752-6028</b>
V-3752	1-1/4 UA	3 - 6 or 9-1	<b>V-3752-6018</b>
V-3752	1- 1/4 UG	3 - 6 or 9-13	<b>V-3752-6019</b>
V-3752	1-1/2 UA	3 - 6 or 9-13	<b>V-3752-6020 or V-3752-6030</b>
V-3752	2	3 - 6 or 9-13	<b>V-3752-6034 or V-3752-6031</b>
V-3800	3/4 UA	3 - 6	<b>V-3800-6001</b>
V-3754-1008	3/4	9 - 13	<b>V-3754-6001</b>
V-3754-1022	3/4	3 - 6	<b>V-3754-6001</b>
V-3754-1026	3/4	3 - 6	<b>V-3754-6001</b>
V-3754-4001	3/4	3 - 6	<b>V-3754-6001</b>
VB-3754-4	3/4		<b>V-3754-6001</b>
VB-3754-4014	3/4		<b>V-3754-6001</b>
V-3754-1010	1	9 - 13	<b>V-3754-6002</b>
V-3754-1023	1	3 - 6	<b>V-3754-6002</b>
V-3754-1027	1	3 - 6	<b>V-3754-6002</b>
V-3754-4002	1	3 - 6	<b>V-3754-6002</b>
VB-3754-5	1		<b>V-3754-6002</b>
VB-3754-8	1-1/4		<b>V-3754-6002</b>
V-3974-1004	3/4	9 - 13	<b>V-3974-6001</b>
V-3974-1010	3/4	9 - 13	<b>V-3974-6001</b>
V-3974-2004	3/4	9 - 13	<b>V-3974-6001</b>
V-3974-4001	3/4	9 - 13	<b>V-3974-6001</b>
VB-3974-4	3/4		<b>V-3974-6001</b>
VB-3974-1005	1		<b>V-3974-6002</b>
V-3974-1011	1	9 - 13	<b>V-3974-6002</b>
V-3974-2005	1	9 - 13	<b>V-3974-6002</b>
V-3974-4002	1	9 - 13	<b>V-3974-6002</b>
V-4324-1005	3/4	4 - 8	<b>V-4324-6001</b>
V-4324-1006	3/4	9 - 13	<b>V-4324-6001</b>
V-4324-1013	3/4	9 - 13	<b>V-4324-6001</b>
V-4324-4001	3/4	4 - 8	<b>V-4324-6001</b>
V-4324-4003	3/4	9 - 13	<b>V-4324-6001</b>
V-4324-4014	3/4		<b>V-4324-6001</b>
VB-4324-4	3/4		<b>V-4324-6001</b>
V-4324-1007	1	4 - 8	<b>V-4324-6002</b>
V-4324-1008	1	9 - 13	<b>V-4324-6002</b>
V-4324-1014	1	9 - 13	<b>V-4324-6002</b>
V-4324-4002	1	4 - 8	<b>V-4324-6002</b>
V-4324-4004	1	9 - 13	<b>V-4324-6002</b>
VB-4324-5	1		<b>V-4324-6002</b>
VB-4324-8	1-1/4		<b>V-4324-6002</b>

**Inner Valve Reconditioning Kits, 3/4 to 2 in. (Part 2 of 2)**

Valve Body	Valve Size (in.)	Spring Range	Inner Valve Kit
V-3754-1028	1-1/2	3 - 6	<b>V-5254-6001</b>
V-3754-1029	1-1/2	9 - 13	<b>V-5254-6001</b>
V-3754-1030	1-1/2	3 - 6	<b>V-5254-6001</b>
VB-3754-6	1-1/2		<b>V-5254-6001</b>
V-5254-1	1-1/2	2 - 5	<b>V-5254-6001</b>
V-5254-11	1-1/2	2 - 5	<b>V-5254-6001</b>
V-5254-2	1-1/2	2 - 5	<b>V-5254-6001</b>
V-5254-3	1-1/2	9 - 13	<b>V-5254-6001</b>
VB-3754-7	2		No kits available, replace valve.
V-5254-4	2	9 - 13	
V-5254-5	2	2 - 5	
V-5254-6	2	9 - 13	
V-5254-12	2	2 - 5	
V-3974-1012	1-1/2	9 - 13	<b>V-5464-6001</b>
V-3974-1013	1-1/2	9 - 13	<b>V-5464-6001</b>
VB-3974-6	1-1/2		<b>V-5464-6001</b>
V-5464-1	1-1/2	9 - 13	<b>V-5464-6001</b>
V-5464-11	1-1/2	9 - 13	<b>V-5464-6001</b>
V-5464-2	1-1/2	9 - 13	<b>V-5464-6001</b>
VB-3974-7	2		No kits available, replace valve.
V-5464-3	2	9 - 13	
V-5464-4	2	9 - 13	
V-5464-12	2	9 - 13	
V-4324-1015	1-1/2	4 - 8	<b>V-5844-6001</b>
V-4324-1016	1-1/2	9 - 13	<b>V-5844-6001</b>
V-4324-1017	1-1/2	9 - 13	<b>V-5844-6001</b>
VB-4324-6	1-1/2		<b>V-5844-6001</b>
V-5844-1	1-1/2	4 - 8	<b>V-5844-6001</b>
V-5844-2	1-1/2	9 - 13	<b>V-5844-6001</b>
V-5844-2	1-1/2	9 - 13	<b>V-5844-6001</b>
V-5844-11	1-1/2	9 - 13	<b>V-5844-6001</b>
VB-4324-7	2		No kits available, replace valve.
V-5844-4	2	4 - 8	
V-5844-5	2	9 - 13	
V-5844-6	2	9 - 13	
V-5844-12	2	9 - 13	